



The EVER **ECO LCD** power supply unit protects the equipment connected to it against voltage decays and drops, and eliminates the possibility of damage arising from overvoltage in the mains. Their main purpose of the EVER ECO LCD series UPSs is to protect **computers**, **video games consoles**, **telecommunication networks and devices (WiFi)**, **monitors**, **inkjet printers** and **fiscal devices**.

## **FEATURES**

- Four IEC 320 outlet sockets with surge protection and emergency power supply (black).
- Four IEC 320 network outlet sockets with surge protection and without emergency power supply (white) (only in ECO 800 LCD and ECO 1000 LCD).
- "Cold start" option of starting the UPS without connection to the mains.
- Complex LCD panel (EVS).
- Acoustic signalling of particular work conditions.
- Digital battery level meter (DBM).
- Intelligent multifunction button (IMB).
- Microchip control of all parameters.
- Double protection system (DPS).
- Power save mode (GREEN FUNCTION).
- Fast and easy battery replacement (ESB).
- Telecommunication filter (RJ45 port).

## SERVICE

- Door-to-door support
- 3-year warranty for the UPS
- 2-year warranty for batteries
- Execution in 14 working days





- Overload
- Short circuit
- Surge





## **TECHNICAL DATA**

PARAMETERS \ TYPE	ECO 500 LCD	ECO 800 LCD	ECO 1000 LCD	
Part number	T/ELCDTO-000K50/00	T/ELCDTO-000K80/00	T/ELCDTO-001K00/00	
Output Power (Apparent / Active) <sup>1)</sup>	500 VA / 300 W	800 VA / 500 W	1000 VA / 600 W	
GENERAL DATA AND ENVIRONMENTAL	300 447 300 44		1000 VA / 000 W	
Topology		VFD (offline)		
Number of phases (in/out)	1/1			
Housing Type	Tower			
Operating temperature <sup>2)</sup>	0 ÷ +40 °C			
Storage temperature	0 ÷ +40 °C			
Relative humidity during operation	20 ÷ 80 % (non-condensing)			
Relative humidity during storage	20 ÷ 95 % (non-condensing)			
Operating elevation <sup>3)</sup>	< 1000 m			
Protection level	IP20			
Environment of installation	Office / industrial rooms with low level of pollution			
Cooling	Gravity			
INPUT				
		230 V AC		
Nominal input voltage Input voltage range and tolerance Input voltage rated frequency Input voltage frequency range and tolerance Transfer thresholds: Mains – UPS	~190 ÷ 259 V ± 5 %			
E Input voltage rated frequency	50 Hz			
Input voltage frequency range and tolerance	45 ÷ 55 Hz ± 1 Hz			
Transfer thresholds: Mains – UPS	~190 ÷ 259 V ± 5 %			
OUTPUT				
Nominal output voltage	230 V AC			
Output voltage range and tolerance - normal mode	~190 ÷ 259 V ± 5 %			
Dutput voltage range and tolerance - battery mode	~230 V ± 10 %			
Shape of output voltage (battery mode / normal				
a mode)	Stepped approximation of sine wave / Same as input			
Output voltage rated frequency		50 Hz		
OUTPUT         Nominal output voltage         Output voltage range and tolerance - normal mode         Output voltage range and tolerance - battery mode         Shape of output voltage (battery mode / normal mode)         Output voltage rated frequency         Output voltage rated frequency         Output frequency range and tolerance - mains operation mode         Output voltage filtering         Transfer thresholds: UPS- Mains         Transfer time to battery mode         Transfer time to normal mode         BATTERIES AND TYPICAL RUNTIME         Internal Batteries		Synchronously		
operation mode Output frequency range and tolerance - battery mode				
Output voltage filtering		50 Hz ± 1Hz LC		
Transfer thresholds: UPS– Mains		~200 ÷ 249 V ± 5 %		
Transfer time to battery mode				
Transfer time to normal mode	< 6 ms 0 ms			
BATTERIES AND TYPICAL RUNTIME		0 1113		
Internal Batteries	12 V / 7 Ah VRLA	12 V / 7 Ah VRLA	12 V / 9 Ah VRLA	
	1	2	2	
<ul> <li>Number of internal batteries</li> <li>Maximum overall internal batteries capacity</li> <li>Backup time - internal batteries ( 100 % / 80 % / 50 %</li> <li>Pmax)</li> </ul>	7 Ah	- 7 Ah	9 Ah	
Backup time - internal batteries ( 100 % / 80 % / 50 %				
Pmax)	2 / 5 / 10 min	4 / 7 / 13 min	4 / 6 / 14 min	
	12 V DC	24 V	DC	
은 Nominal voltage DC circuit Internal batteries maximum charging time - after discharging at 80 % Pmax *	16 h	10	h	
discharging at 80 % Pmax *	16 h	10	11	
* Charging time to 000/ bettery conseity				

\* Charging time to 90% battery capacity.

1)For standard operation, the load applied to the output must not exceed 80% of the value in the table. The power margin is necessary to ensure continuous work of the connected devices in the case of a) The permitted maximum load of the power supply unit decreases with the height above the sea level above the limit specified above.



## **TECHNICAL DATA**


PARAMETERS \ TYPE	ECO 500 LCD	ECO 800 LCD	ECO 1000 LCD	
Part number	T/ELCDTO-000K50/00	T/ELCDTO-000K80/00	T/ELCDTO-001K00/00	
Output Power (Apparent / Active) <sup>1)</sup>	500 VA / 300 W	800 VA / 500 W	1000 VA / 600 W	
MECHANICAL SPECIFICATIONS	300 VA / 300 W	000 VA / 500 W	1000 VA / 000 W	
Dimensions (H x W x D)	188 x 80 x 249 mm 270 x 80 x 315 mm			
Net Weight	3,2 kg	6,2 kg	7,1 kg	
Gross Weight	3,7 kg	7,2 kg	8,1 kg	
Transport Dimensions (H x W x D)	260 x 128 x 310 mm	355 x 150 x 398 mm		
Position in which devices transported	Vertical			
Output cables maximum length	< 10 m			
PROTECT				
Input over current protection	Short-circuit protection – Circuit breaker 5 A / 250 V AC	Short-circuit protection – Ci	rcuit breaker 8A / 250 V AC	
	Surge Protection			
Output over current protection	Electronic short-circuit and overload protection			
ACCESSORY AND EXTRA FUNCTIONS				
Power supply connection	Power cord ended with plug with ground terminal 16A (PN-E-93201:1997) + uni-schuko			
Output connection (number and type of sockets)	4 x IEC 320 C13 (10 A) battery and surge protected	4 x IEC 320 C13 (10 A) bat 4 x IEC 320 C13 (10	, 01	
Signalling	Acoustic and optical; LCD display			
Communications interfaces		USB		
LAN filter		LAN 10/100 Base-T		
Software	Yes			
GREEN FUNCTION activation threshold 4)	≤ 80 W			
CERTIFICATION				
	CE			
Declarations		CE		

Notes: 4) In battery mode with no load or load less than treshold value, UPS turn off automatically after 5 minutes. It relates to devices which in serial number after E1 have 1311 or less value


DIMENSIONS



ECO 500 LCD

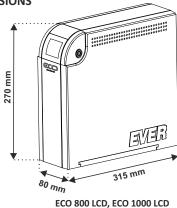


#### LAYOUT OF TERMINALS IN THE POWER AND OUTLET SOCKET






## **ELEMENTS ON FRONT AND SIDE PANELS**

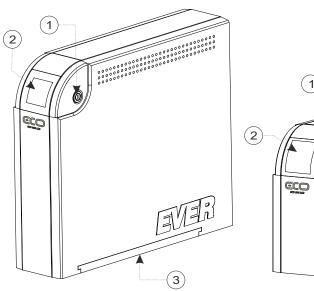

- 1) Intelligent multifunction button (IMB).
- 2) LCD display.
  - 3) Battery chamber cover (battery replacement).

## **REAR PANEL**

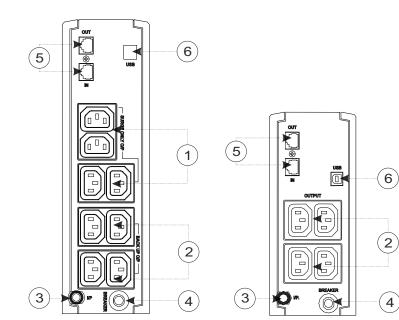

- 1) Outlet sockets with surge protection, without emergency support (white).
- 2) Outlet sockets with surge protection, with emergency support (black).
- 3) Power lead.
- 4) Automatic fuse.
- 5) Telecommunication filter (RJ45 port).
- 6) USB port for communication with PC.





# DESCRIPTION OF LCD DISPLAY ICONS

### ARRANGEMENT OF ICONS ON LCD DISPLAY

ICON	DESCRIPTION
	Load capacity indication - 5-grade scale (further segments light up along with increasing load).
	Battery capacity level indication - 5-grade scale (further segments light up along with increasing battery charge level).
NORMAL	The UPS operates in normal mode (mains power supply).
	The UPS operates in buffer mode (no mains power supply or threshold frequency value or effective value of supply voltage are exceeded).
GREEN FUNCTION	The icon lights up to indicate that power save mode is active (GREEN FUNCTION).
SHORT CIRCUIT	The icon lights up in case of short circuit on the UPS output terminals.
BATTERY DRAINED	Drained battery - replacement is recommended. In order to replace the battery and to deactivate the icon, please contact EVER Support Centre.
UVER LOAD	The icon is displayed in case of overload of the UPS.
SILENT	The icon is displayed when the sound alarm (beeper) is switched off.
FAULT	The icon is active in case of a fault other than overload or short circuit.
	Display of input parameters (input voltage or input frequency). Display of output parameters (output voltage or output frequency). Icons on the display are switched over every 6 seconds.
<b>888.8</b> ×	Voltage or frequency values (on INPUT or OUTPUT, accordingly) – displayed alternately every 3 seconds.



### **MULTIFUNCTION BUTTON DESCRIPTION**

#### LCD DISPLAY BACKLIGHT

Press the multifunction button shortly once to activate LCD display backlight for 20 seconds.

#### SWITCHING POWER TO RECEIVERS ON/OFF

- if receivers are not powered (the UPS is switched off - icons and **BATTERY** are inactive), press and hold

the multifunction button to switch powering the receivers on,

- if receivers are powered (the UPS is switched on - icon and hold it for 3 seconds to switch the receivers powering off,

#### SOUND ALARM ON / OFF

- press the multifunction button 3 times within 3 seconds to switch sound alarms off (icon | 🕅 is displayed),

- press the multifunction button 3 times within 3 seconds again to restore the sound alarms (SILENT icon is off).

#### **POWER SAVE MODE ON / OFF**

- press the multifunction 5 times within 3 seconds to switch the power save mode off (GREEN FUNCTION icon is off),

(UIII)

or BATTER ), is active, press the multifunction button

- press the multifunction button 5 times within 3 seconds again to switch the power save mode on (icon is displayed).

#### PROTECTION

#### AGAINST OVERLOAD

In the mains operation mode, at load over 110% of the nominal power, the UPS indicates the overload condition, with rapid, intermittent sound (2 times per second) and displayed icon Million (OVERLOAD).

If this condition maintains for a longer time, the UPS will automatically switch off. The greater the overload, the faster the UPS will switch off. In the battery operation mode, overload results in the UPS switching off.

#### AGAINST SHORT-CIRCUIT

Short-circuit protection on the input side is provided by an automatic circuit breaker and power supply mains protection. Additionally, for the battery operation mode, there is an electronic protection of the UPS output, the operation of which is signalled by active icon (SHORT-CIRCUIT) and a continuous sound signal.

The power supply from outlet sockets is disconnected and the UPS remains in short-circuit signalling mode. Switch the UPS off with the multifunction button (press and hold it for 3 seconds). Switching the UPS on is possible only after the user's intervention (elimination of short-circuit and switching the UPS on with the multifunction button).

#### AGAINST OVERVOLTAGE

The UPS features protection against surges on the input, which protects circuits of the receivers and internal circuits of the UPS against excessive surges of high energy voltages, caused by atmospheric phenomena and power supply network interferences.



EVER Sp. z o.o. ul. Wołczyńska 19, 60-003 Poznań, Poland tel. +48 61 6500 400, fax +48 61 6510 927, e-mail: ups@ever.eu

# www.ever.eu